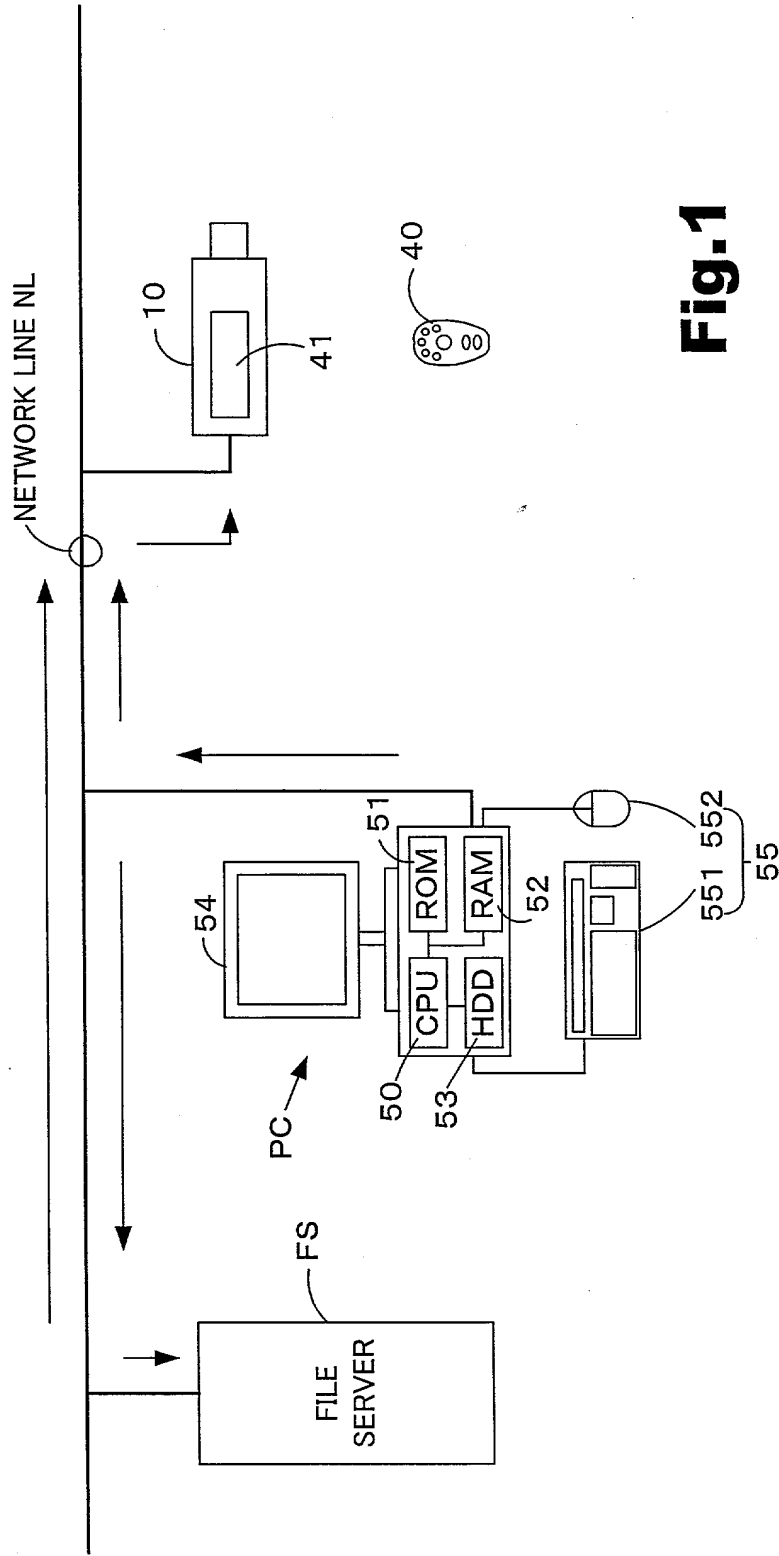 


20090707 9908400F



**Fig.1**

205210" 9508400T

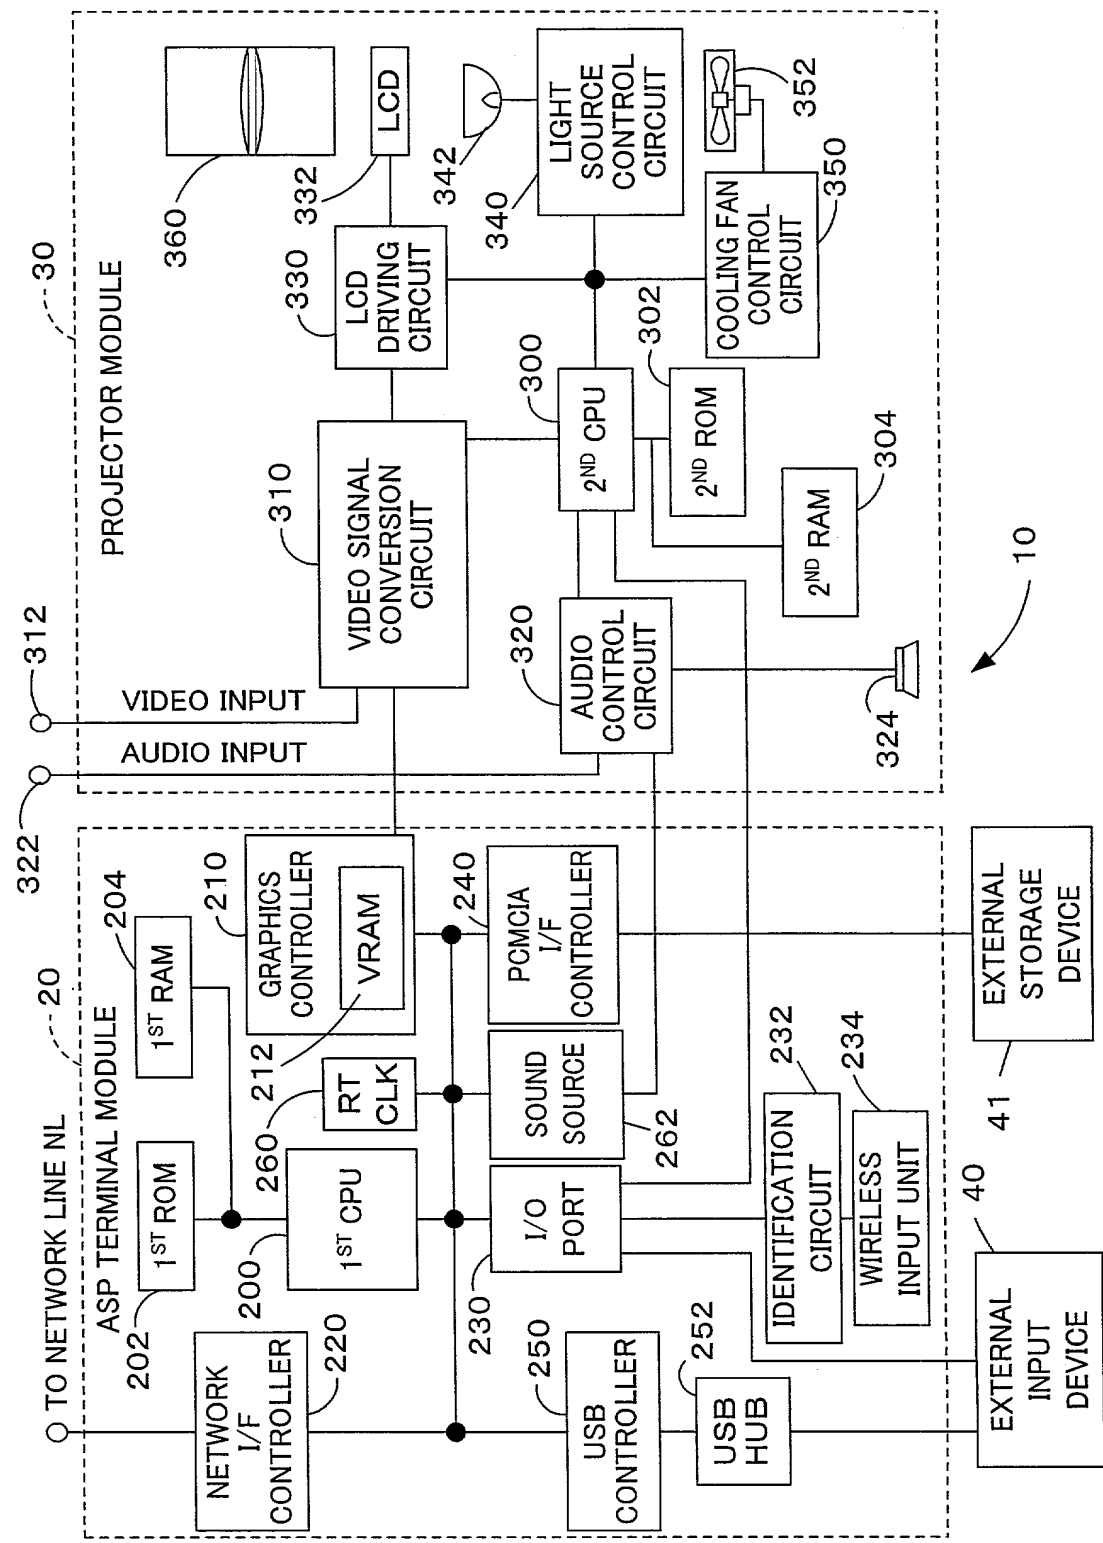 
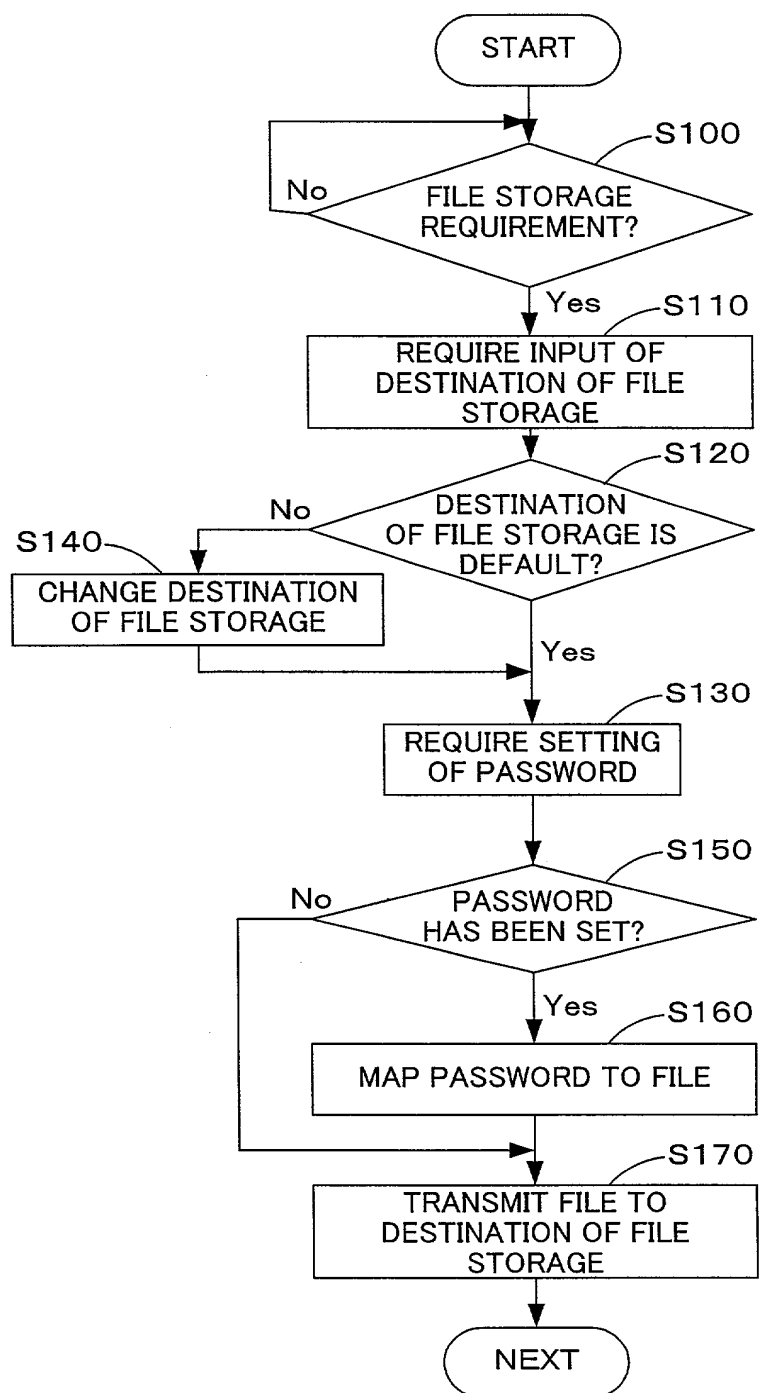 
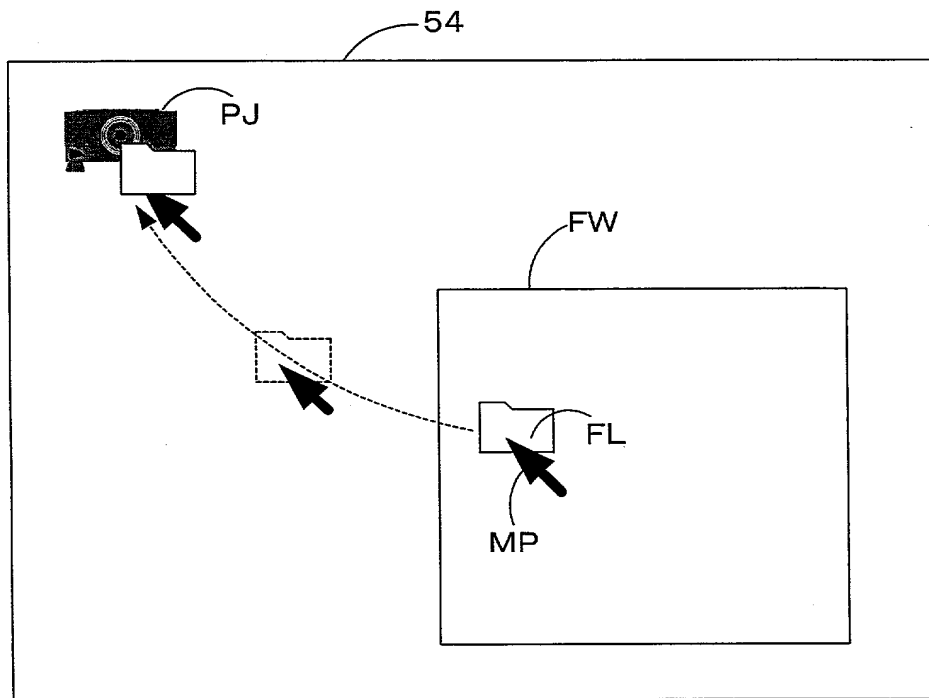 


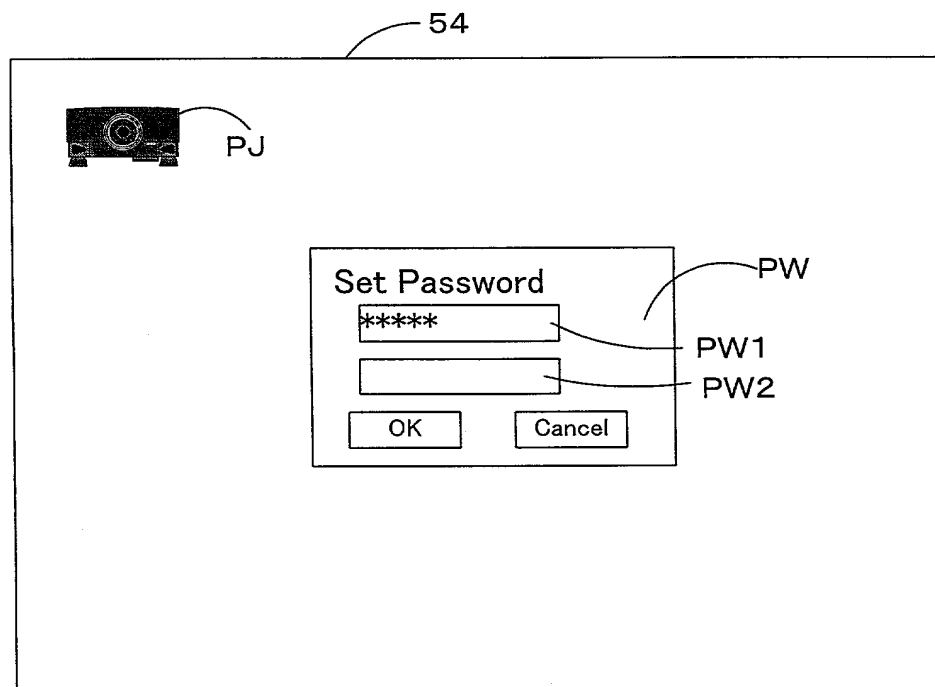 
Fig.2

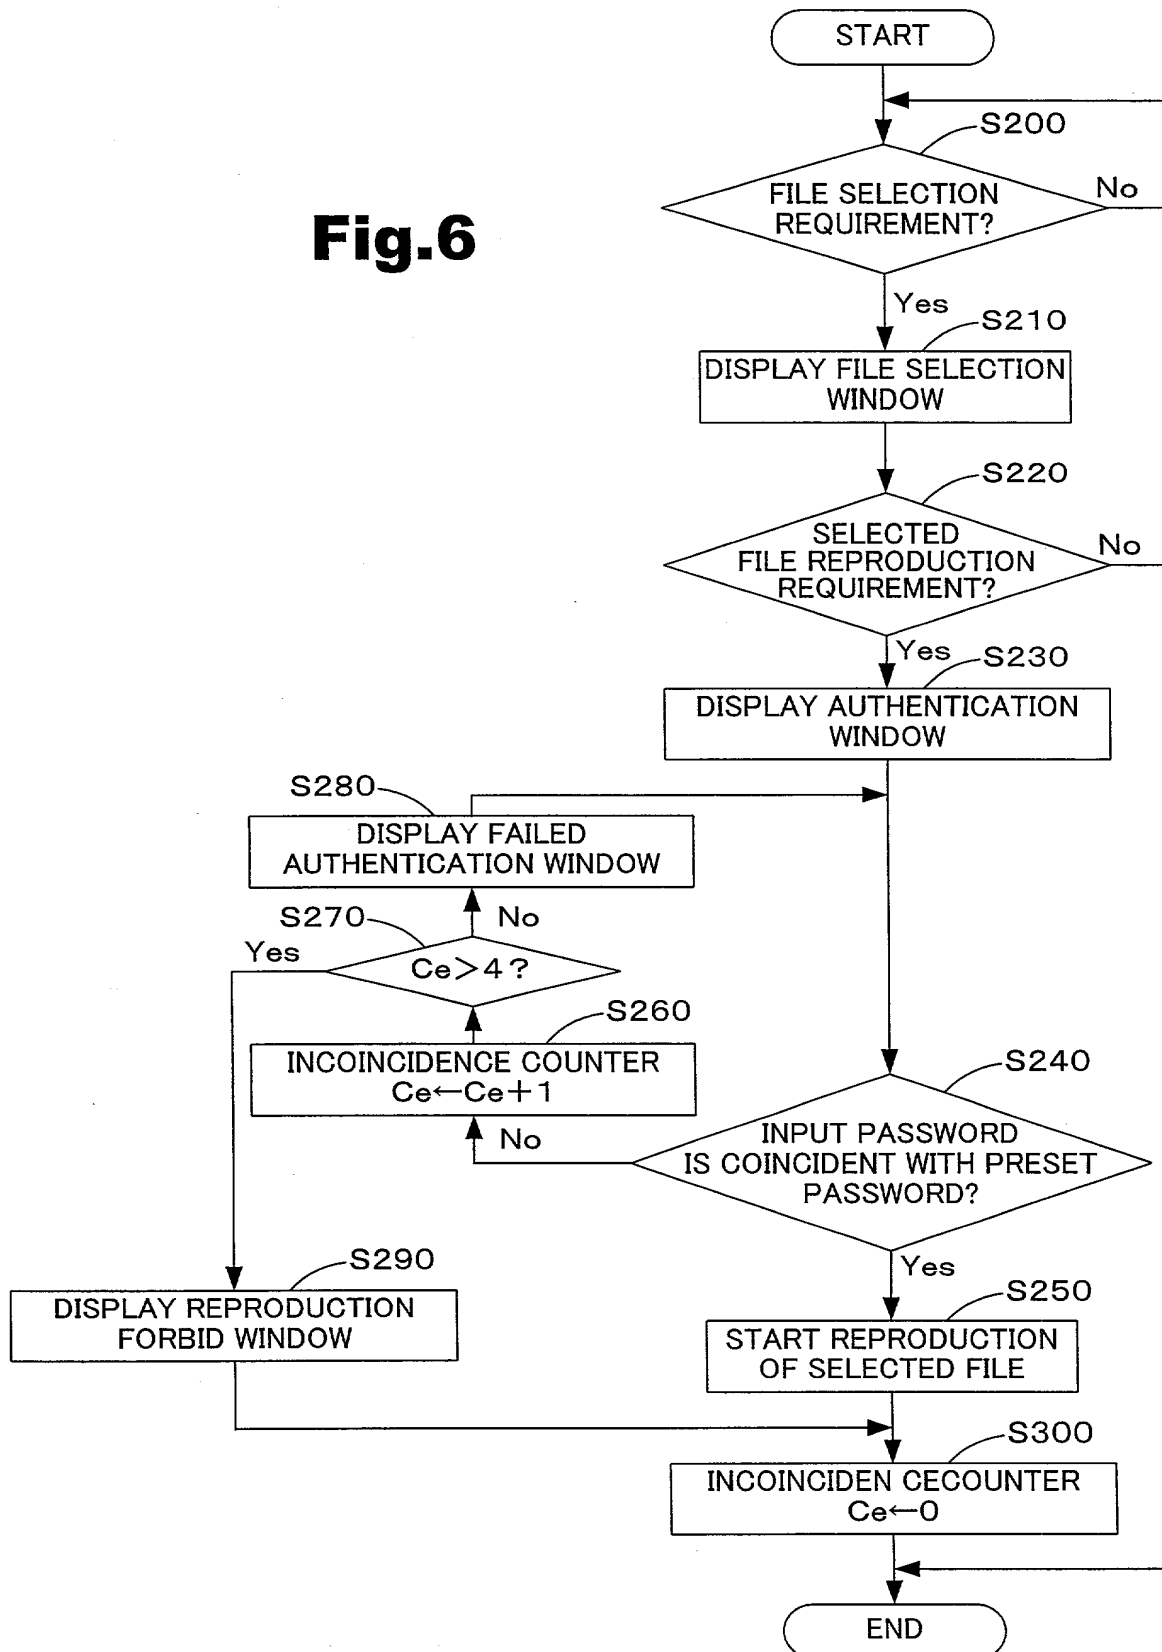 
**Fig.3**

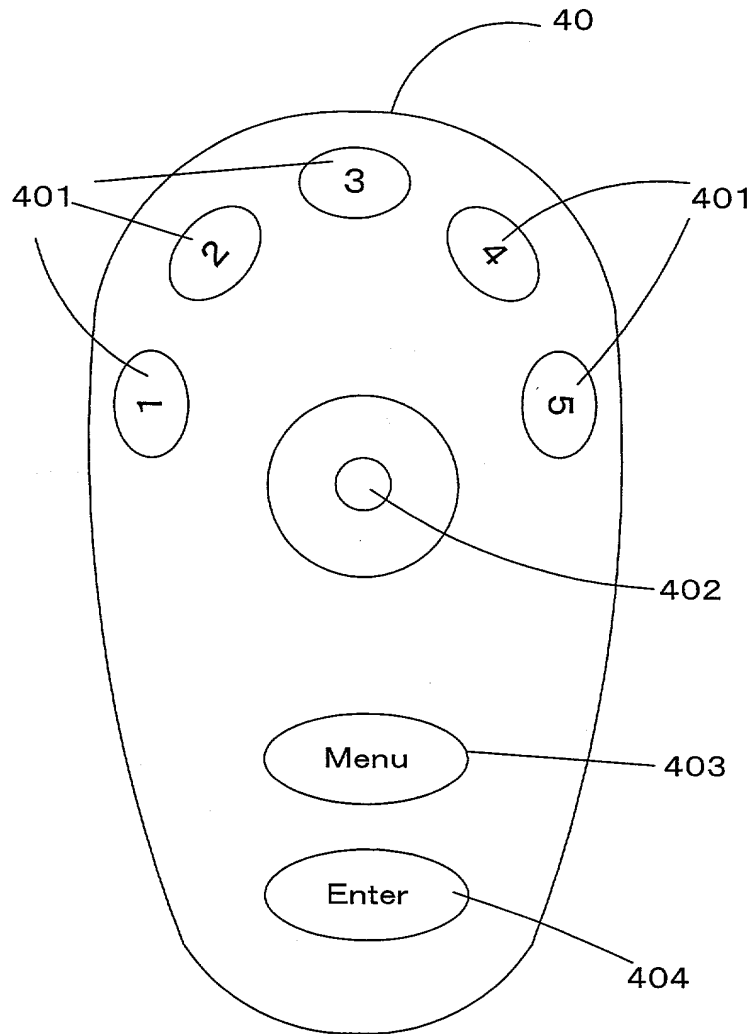 
### Fig.4

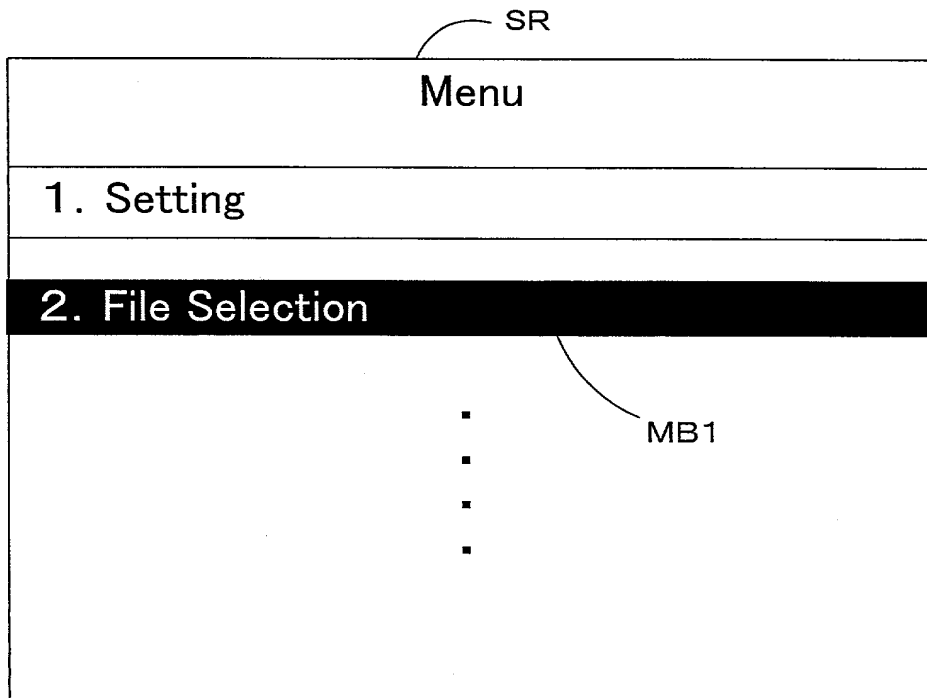 
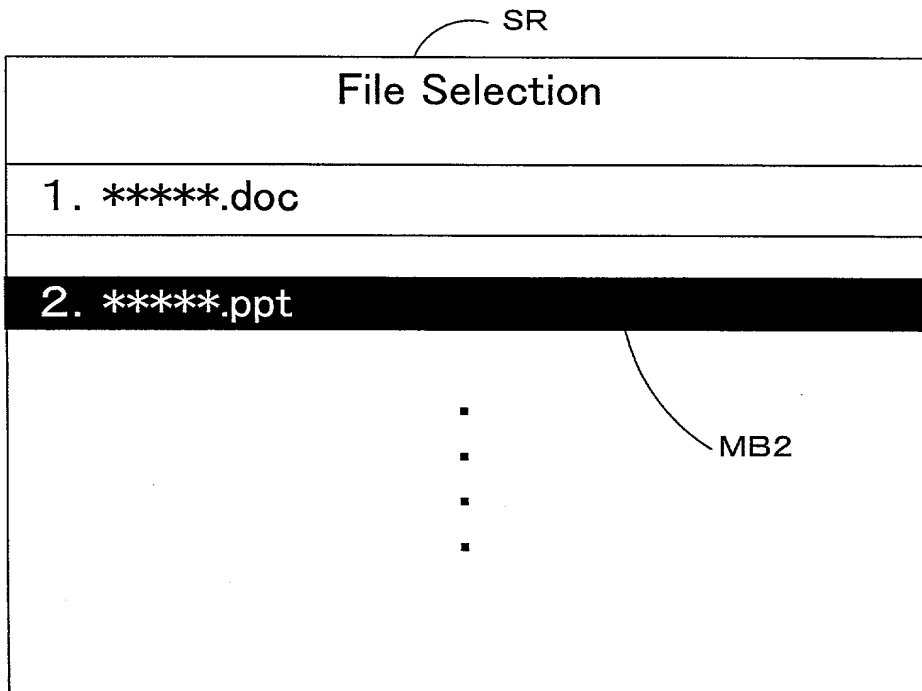 


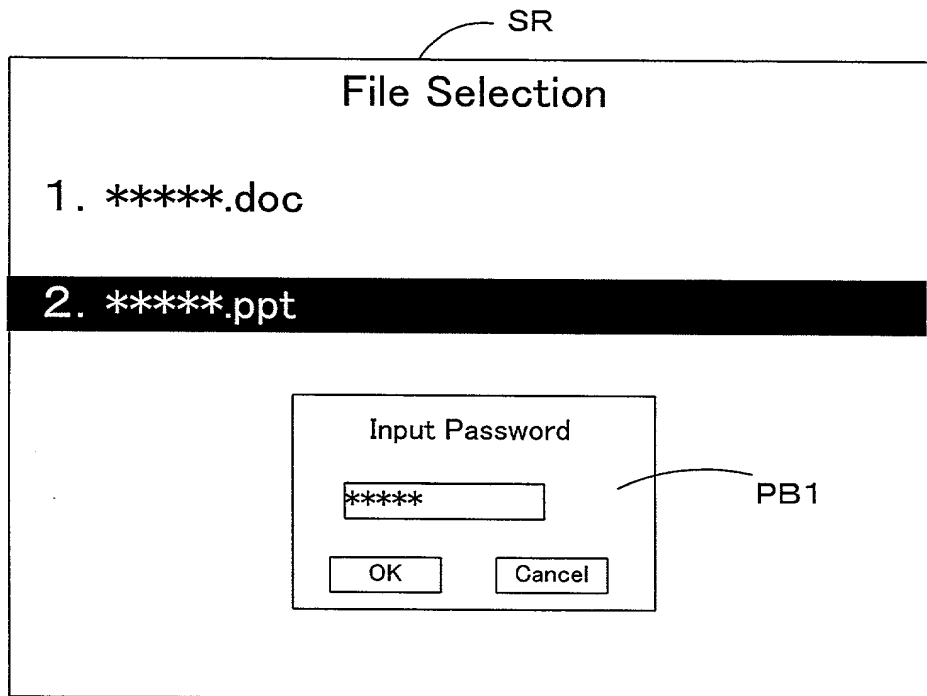 
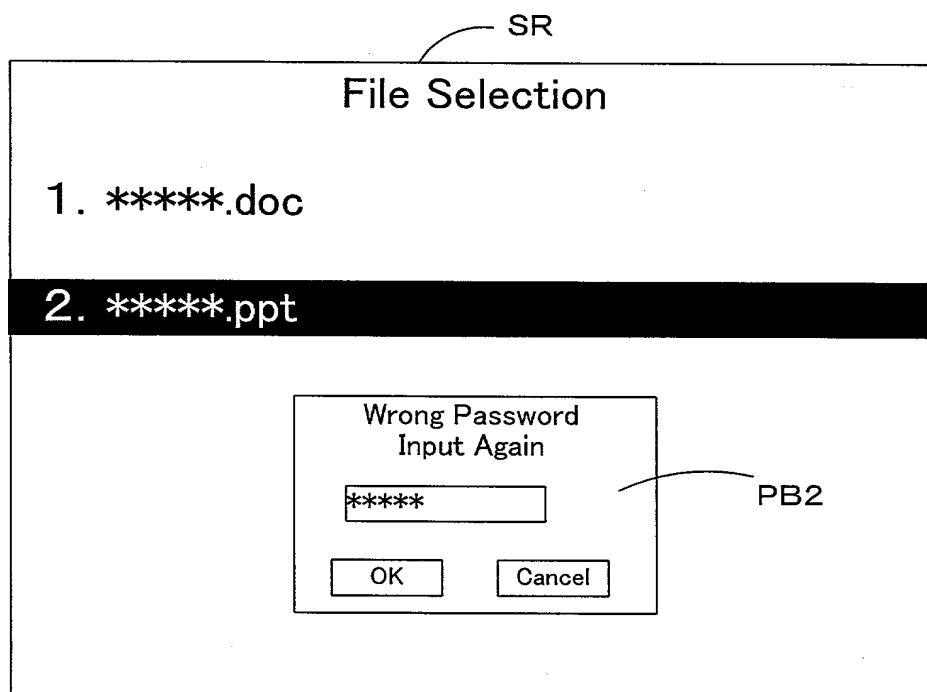 
**Fig.5**



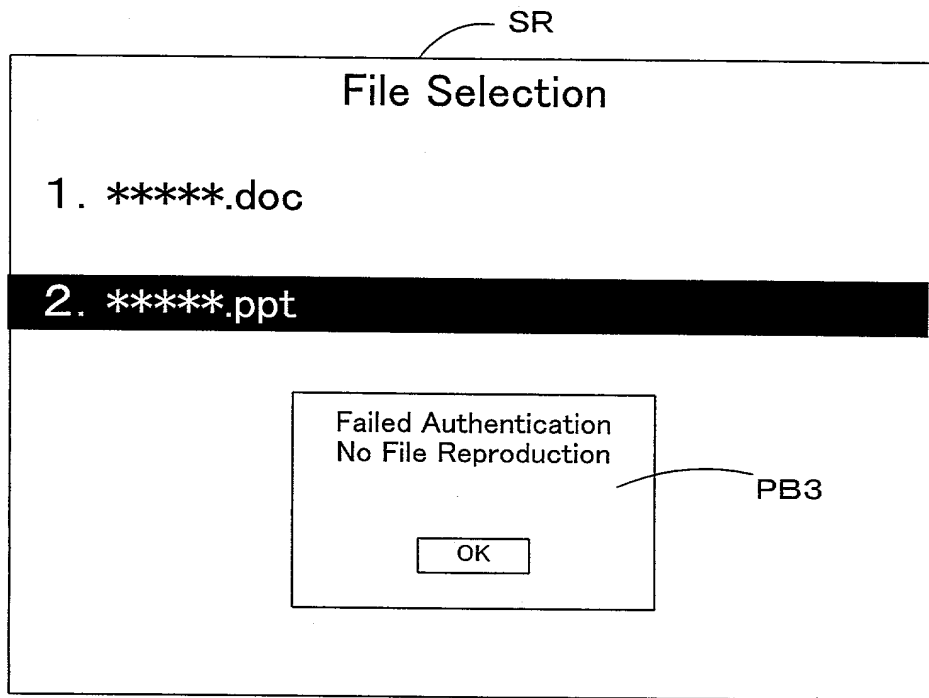 
**Fig.6**

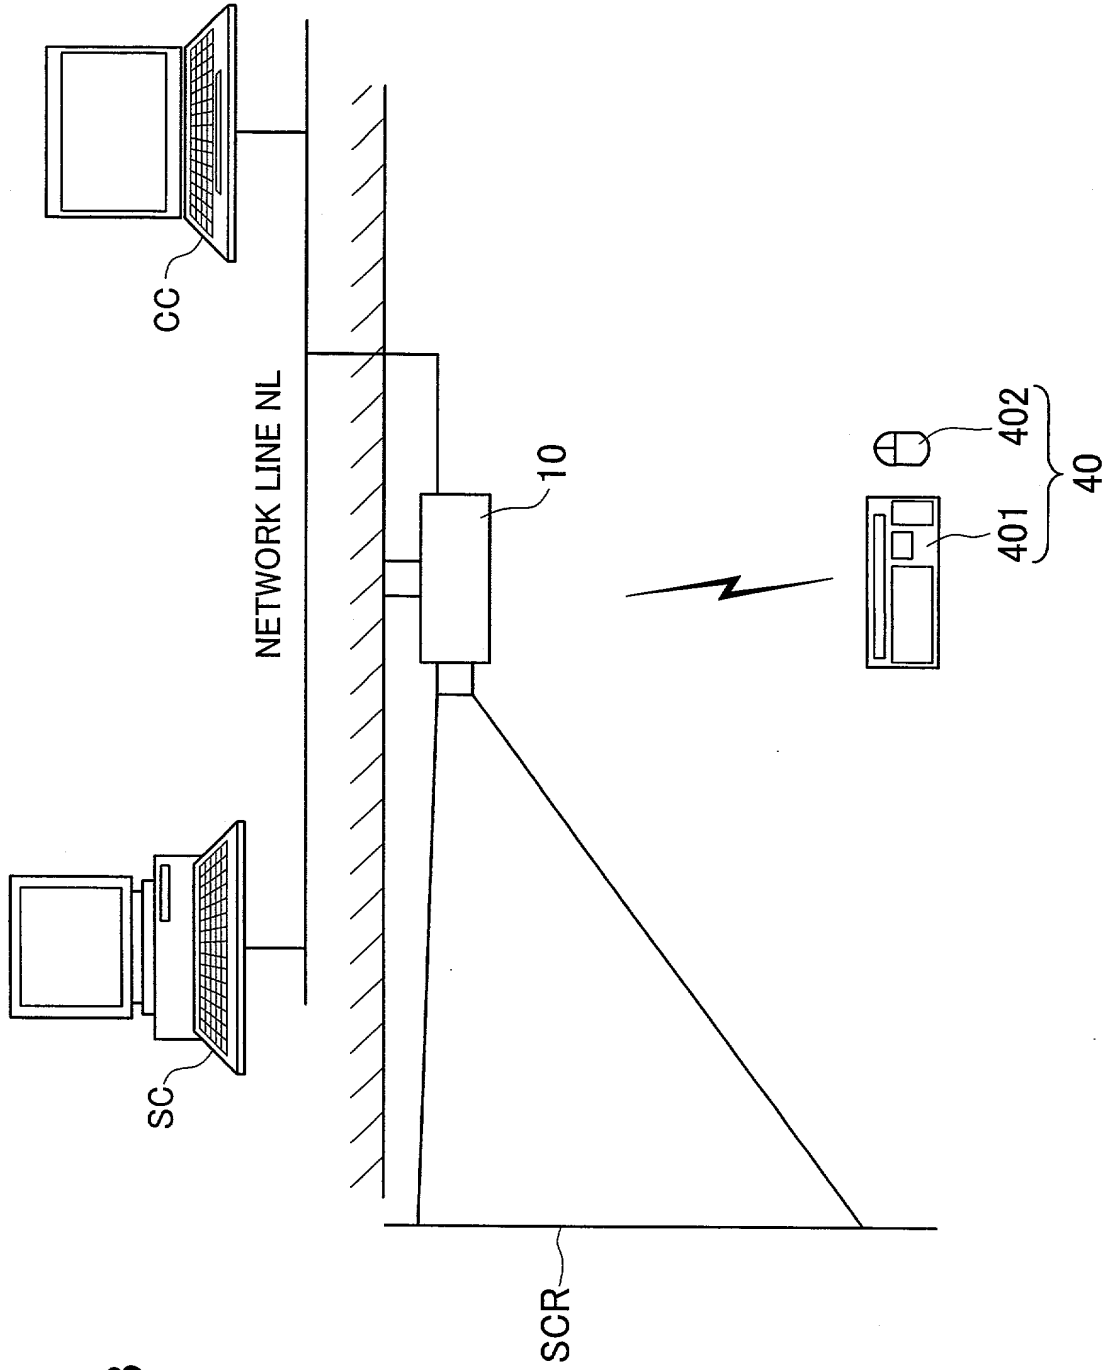 
**Fig.7**

**Fig.8****Fig.9**

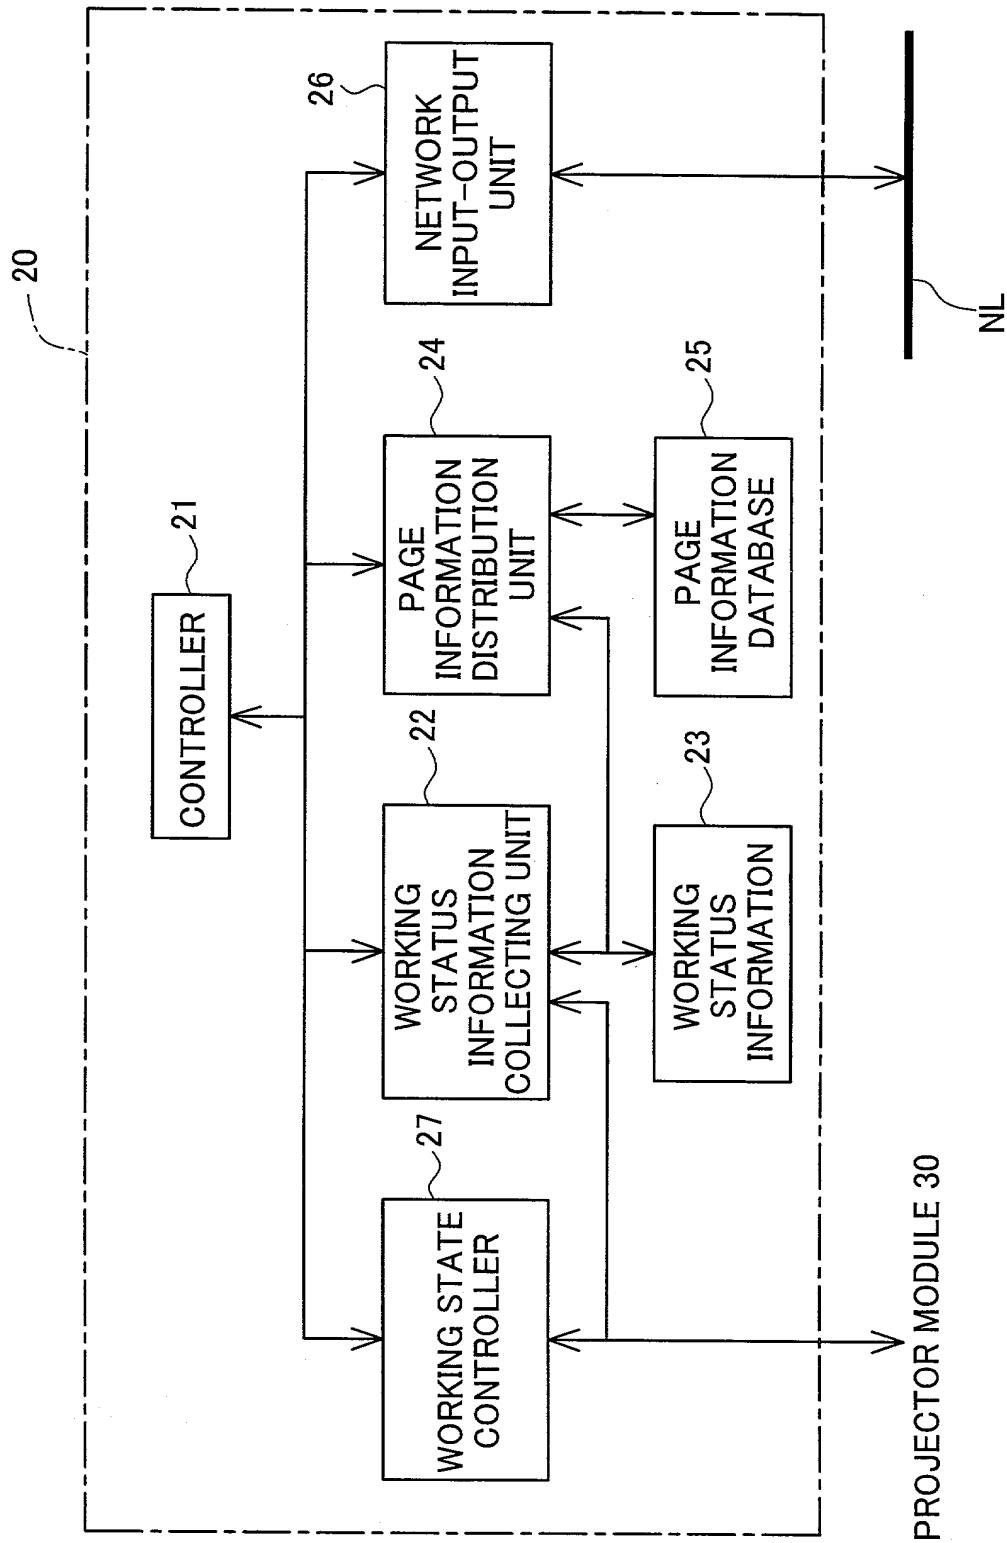 
**Fig.10****Fig.11**

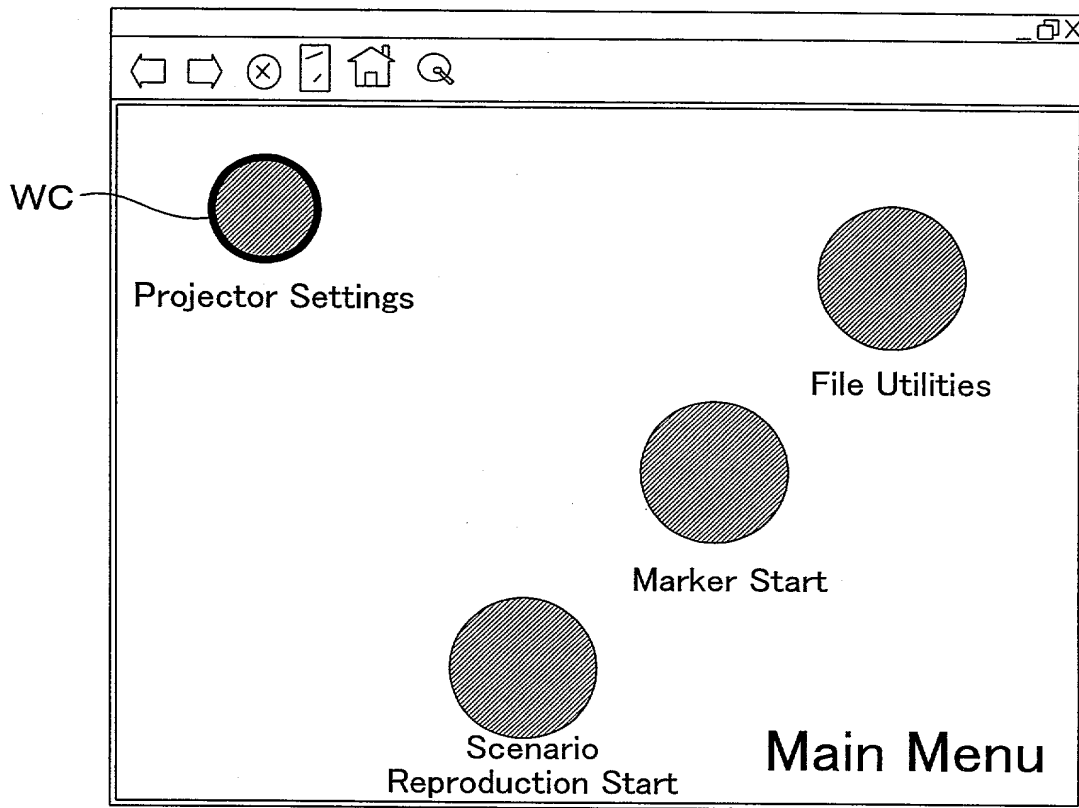 


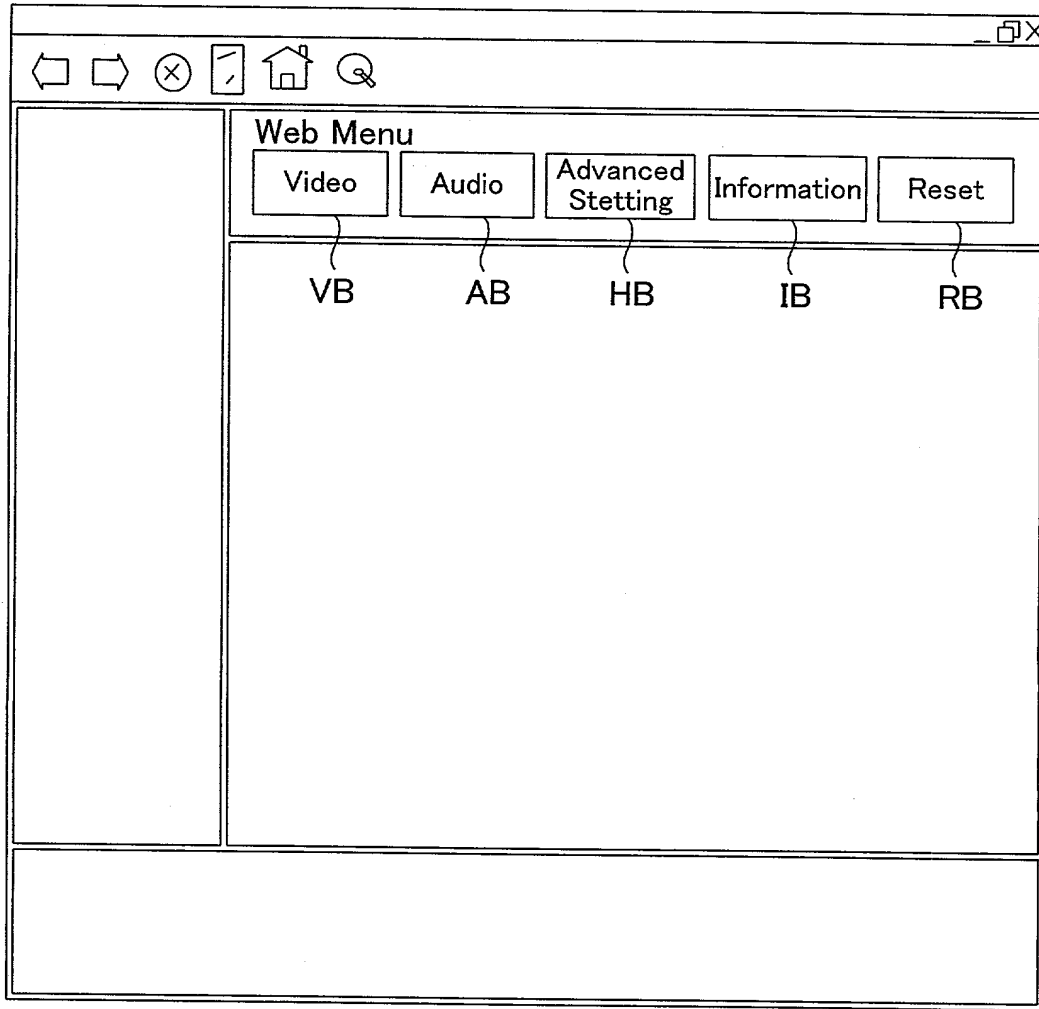 
**Fig.12**

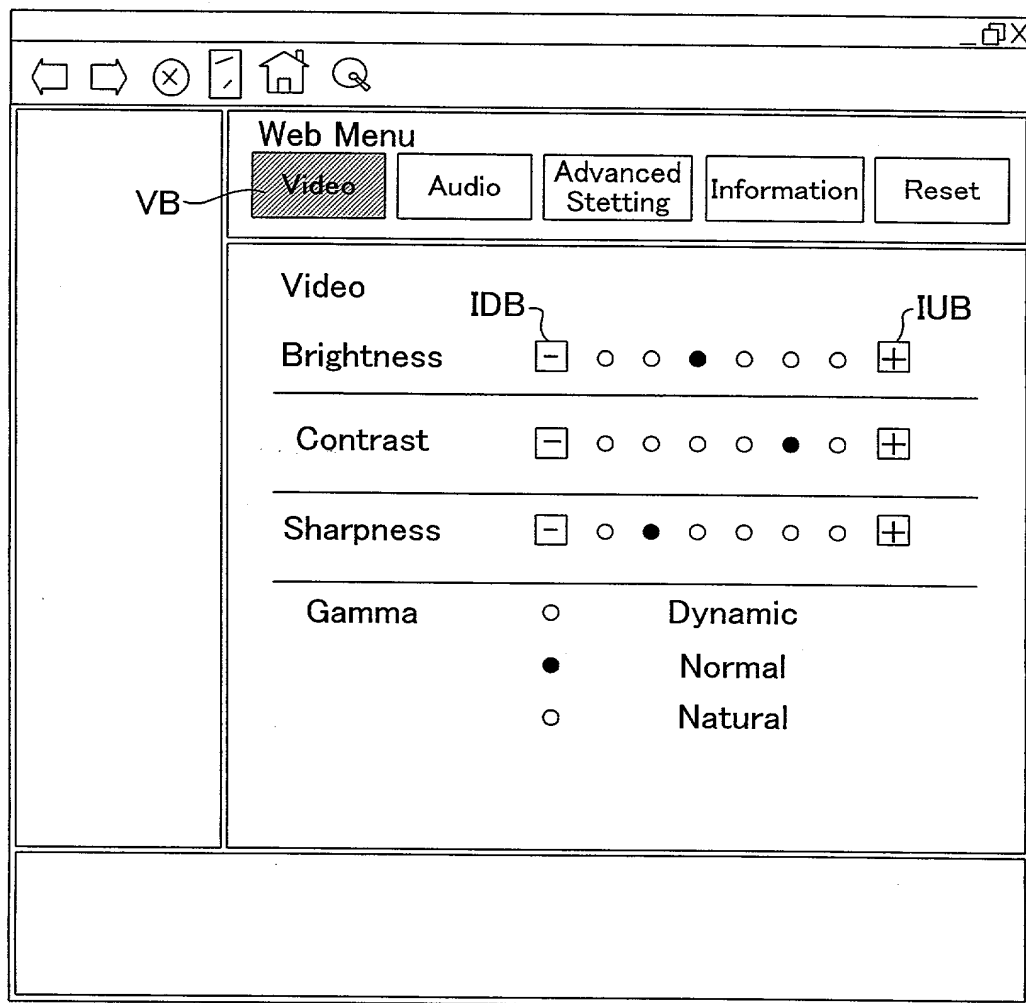 


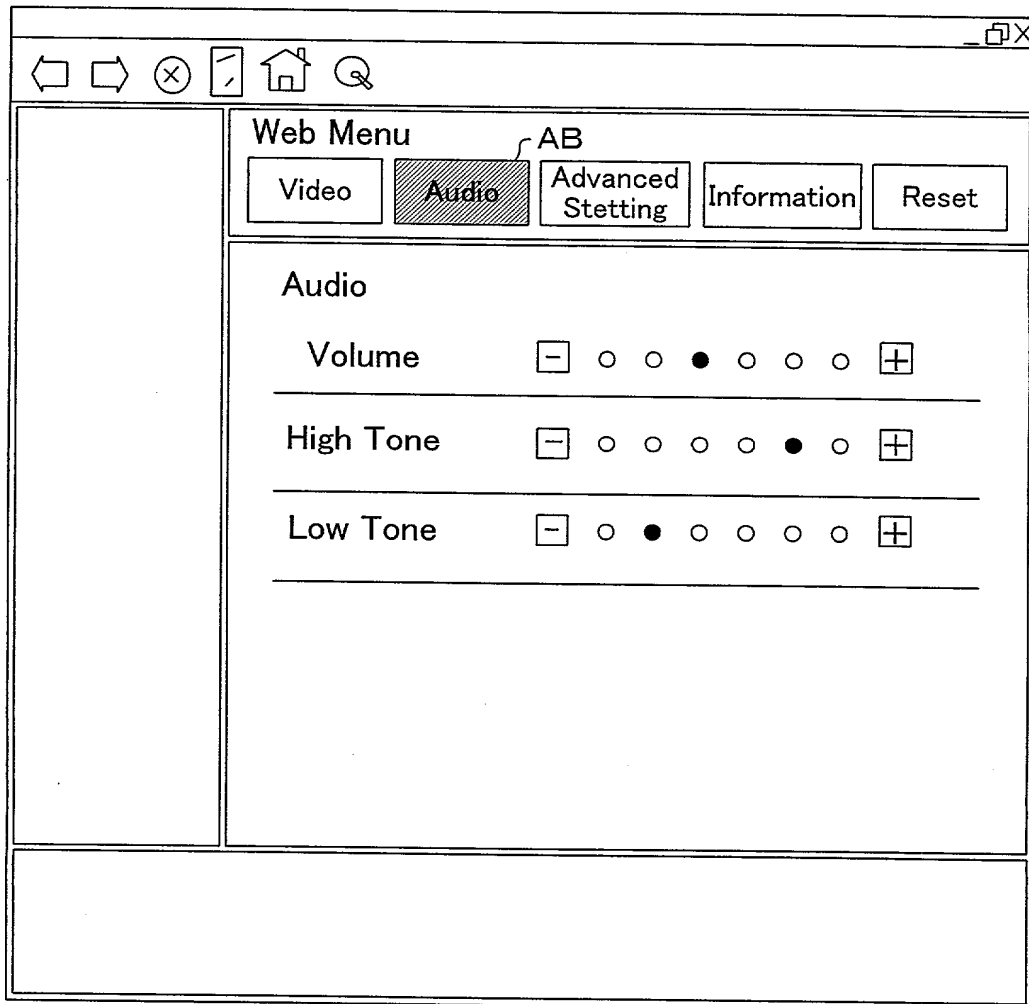 
**Fig.14**



**Fig.15**

**Fig.16**

**Fig.17**

**Fig.18**

The figure shows a web browser window displaying a 'Web Menu' for a device. The menu includes options for Video, Audio, Advanced Stetting, Information, and Reset. The 'Audio' option is selected and highlighted. Below the menu, the 'Audio' settings are displayed, including Volume, High Tone, and Low Tone, each with a slider control. The 'Volume' slider is set to the 4th position (out of 7), 'High Tone' is set to the 6th position (out of 7), and 'Low Tone' is set to the 3rd position (out of 7). The 'AB' label is positioned above the 'Advanced Stetting' button.

Web Menu

Video Audio Advanced Stetting Information Reset

AB

Audio

Volume ☐ ☐ ☐ ☒ ☐ ☐ ☐ ☐ ☐

High Tone ☐ ☐ ☐ ☐ ☐ ☒ ☐ ☐ ☐

Low Tone ☐ ☐ ☒ ☐ ☐ ☐ ☐ ☐ ☐

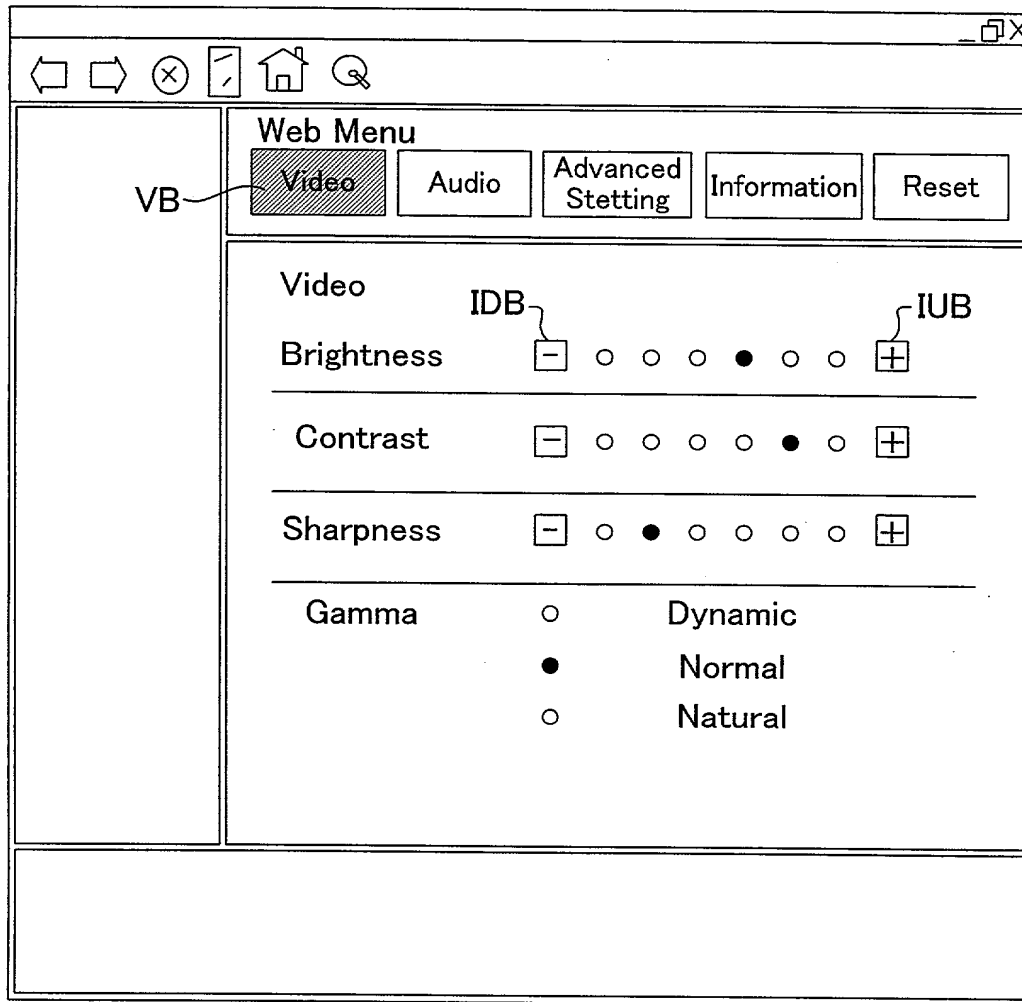 
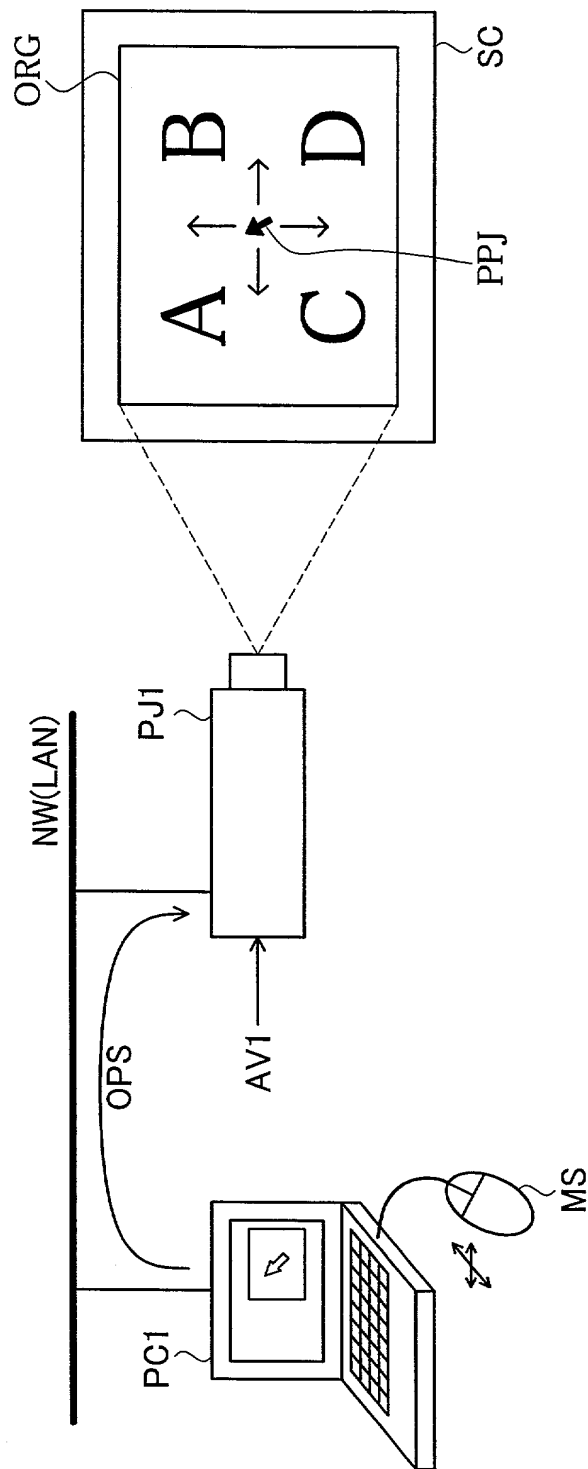 
**Fig.19**



Fig.20



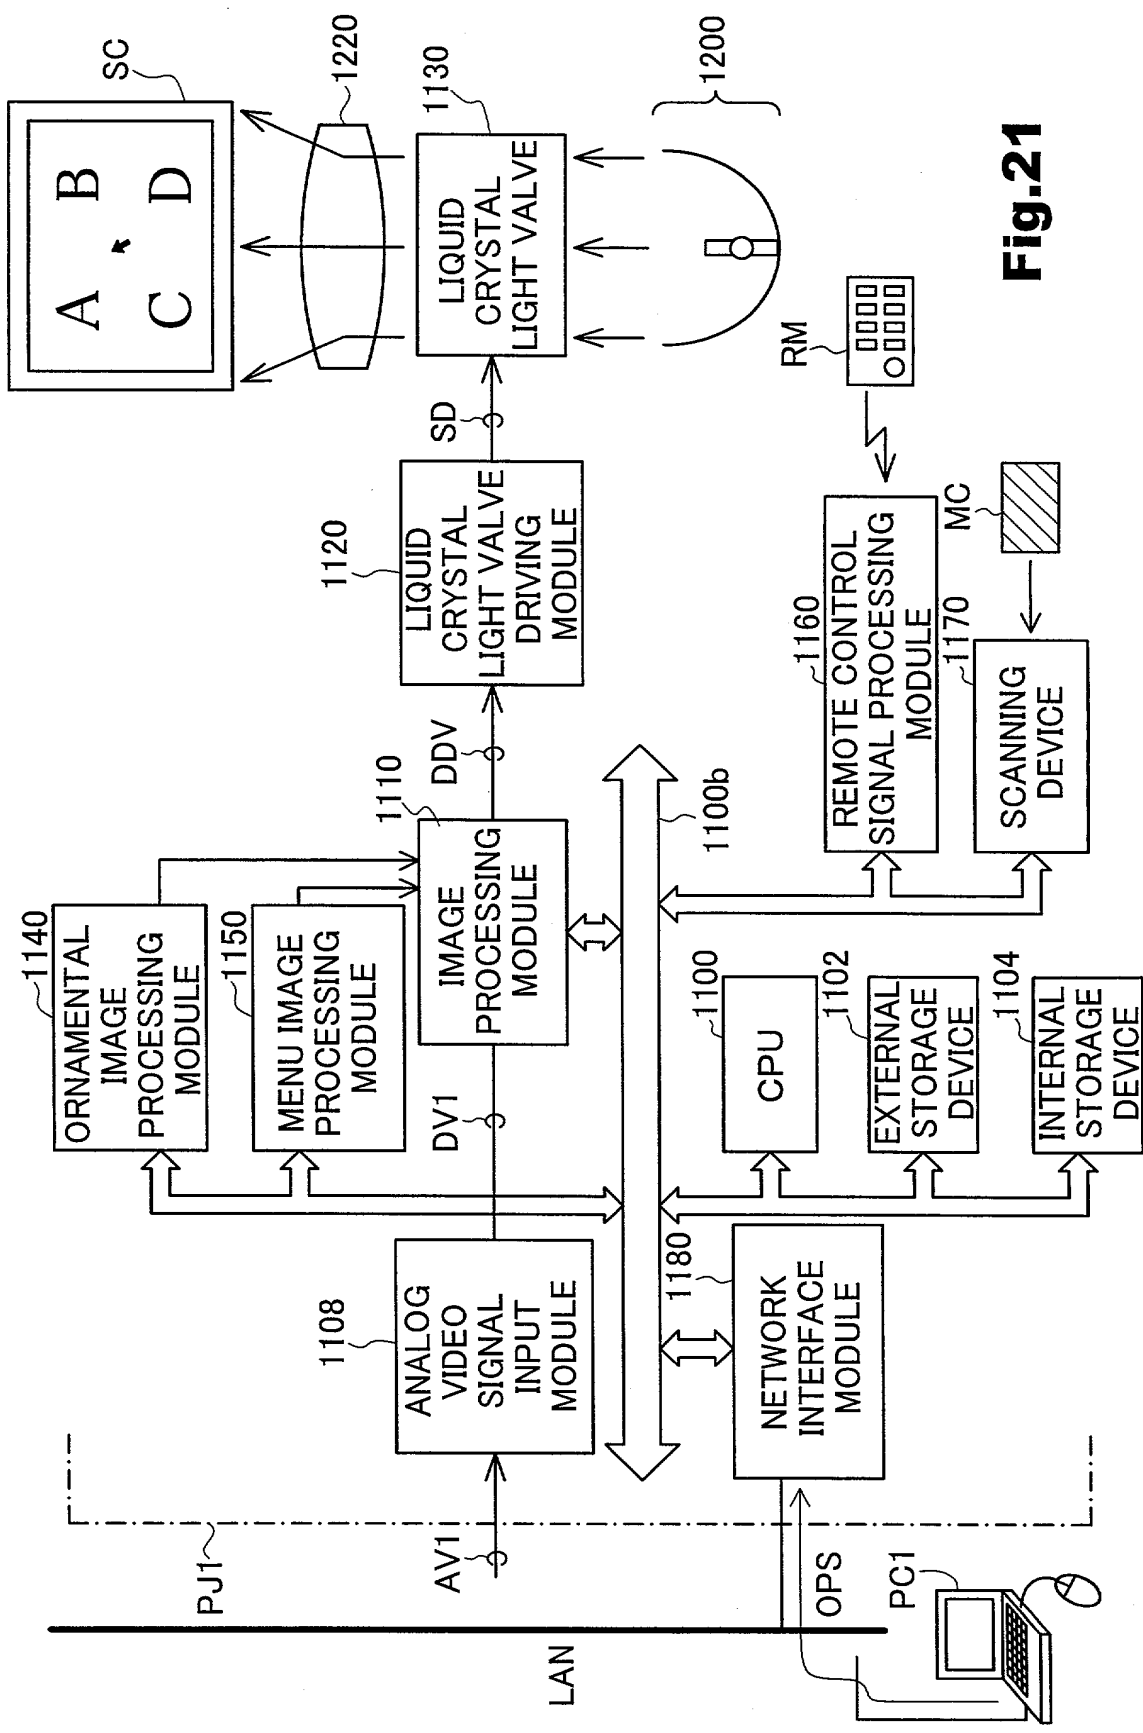 
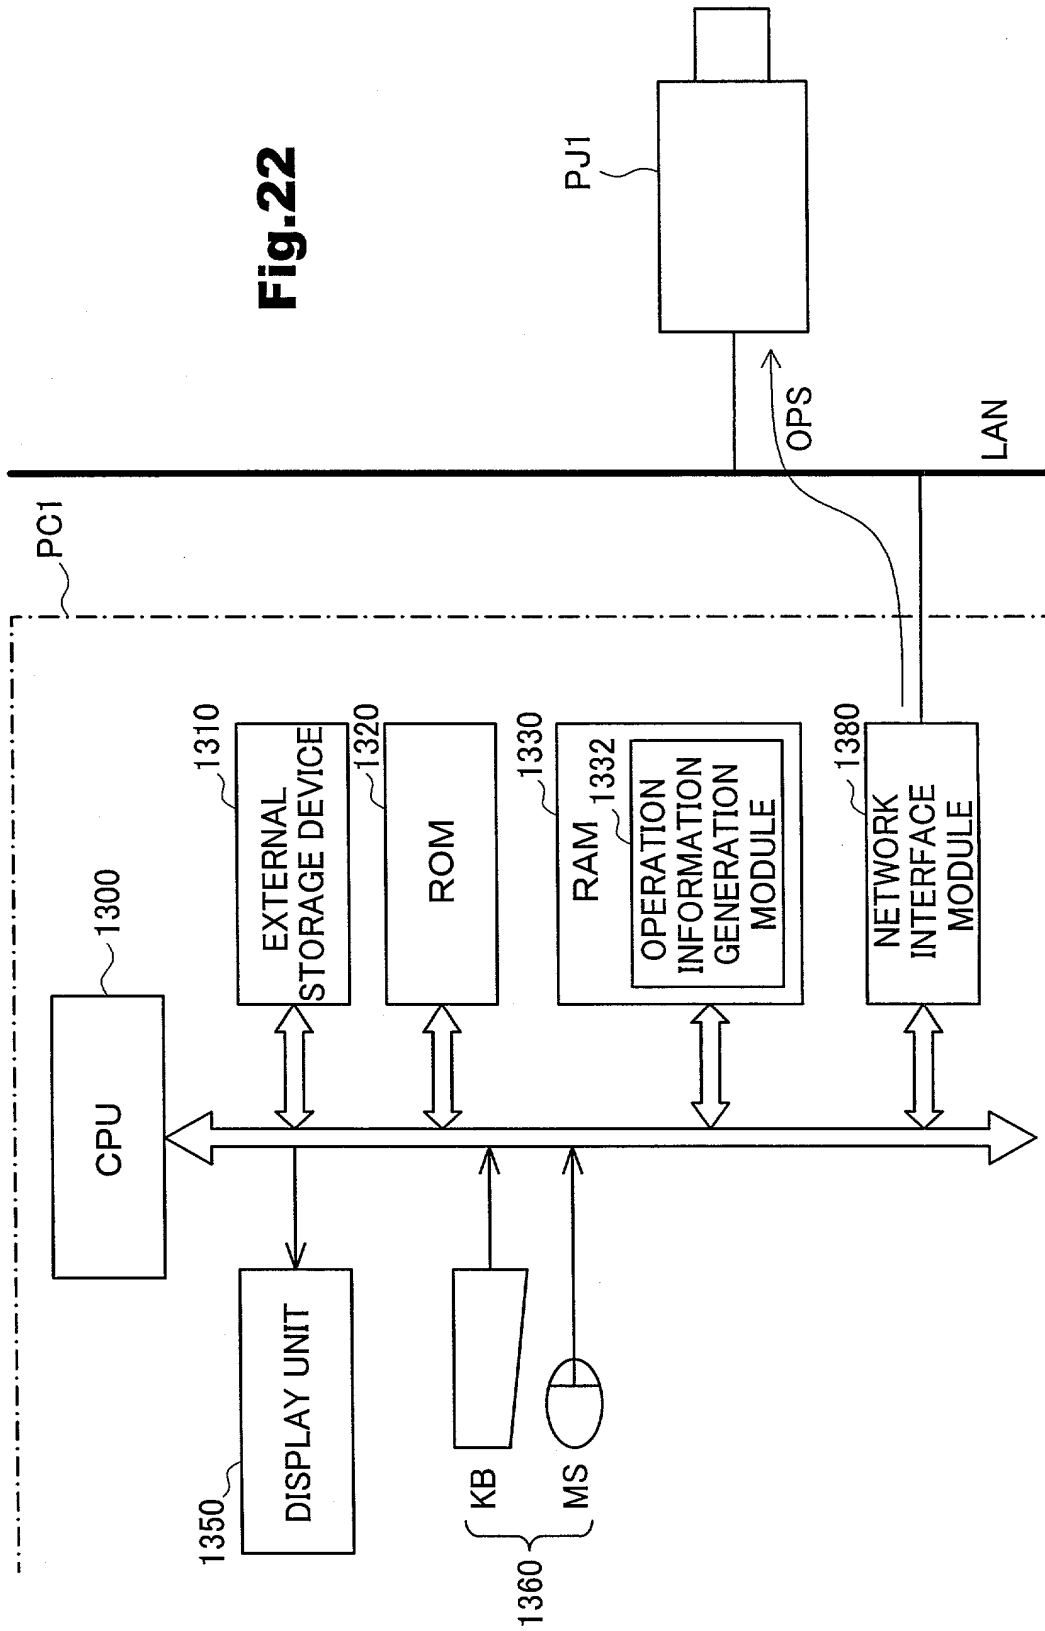 
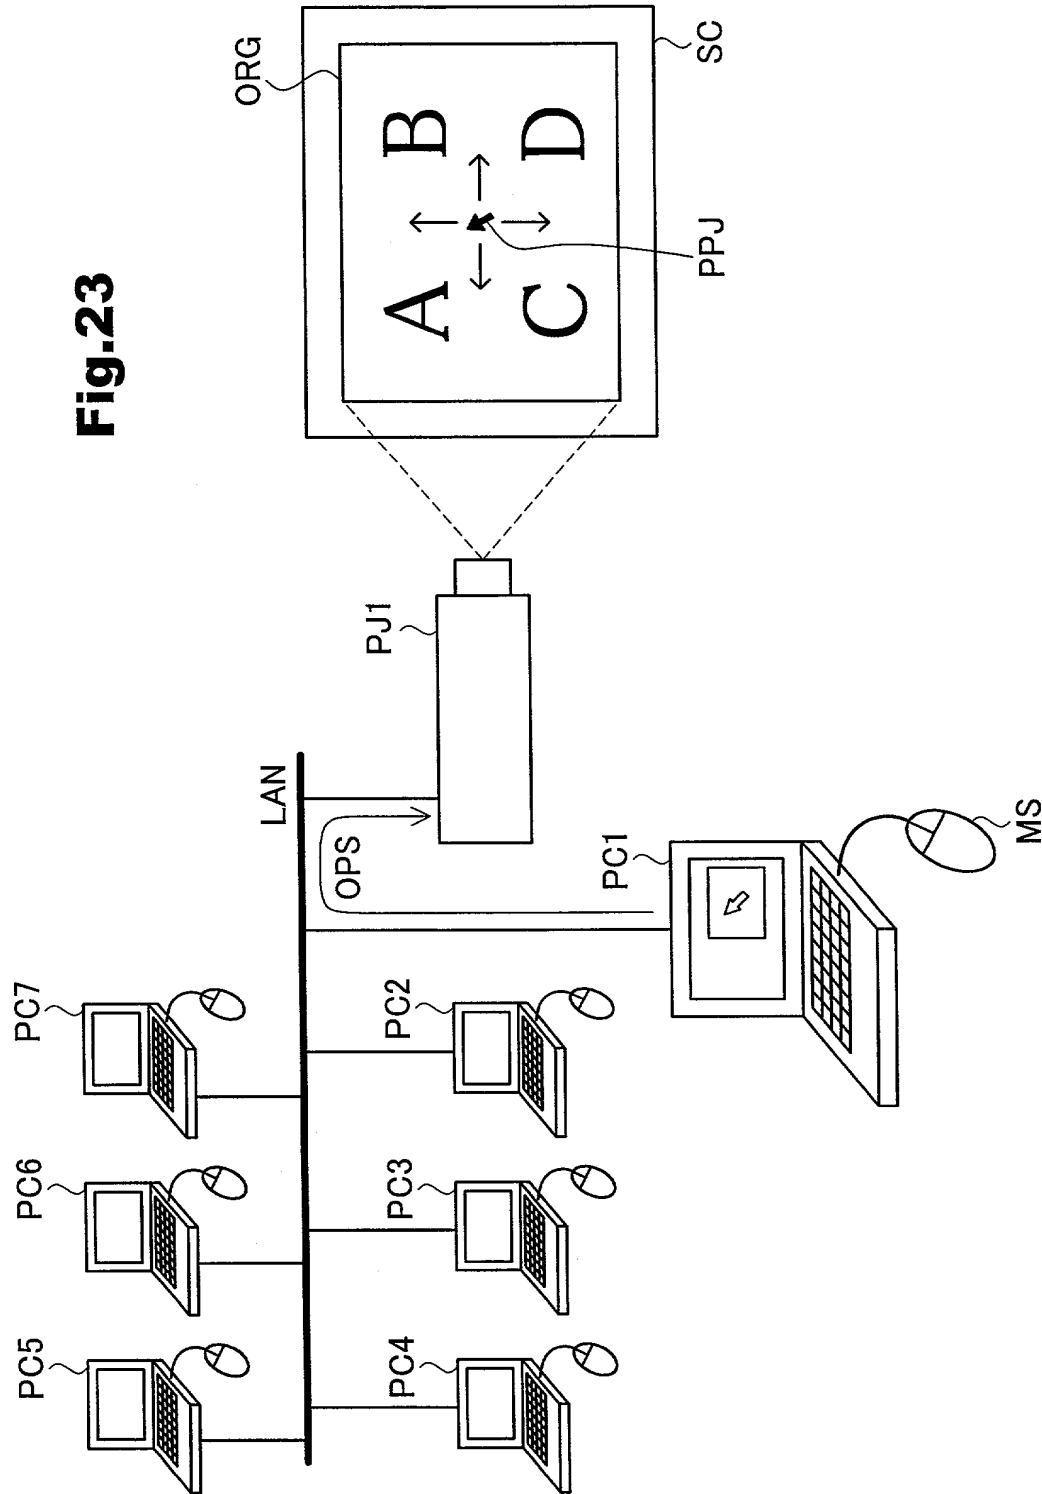 


Fig.21





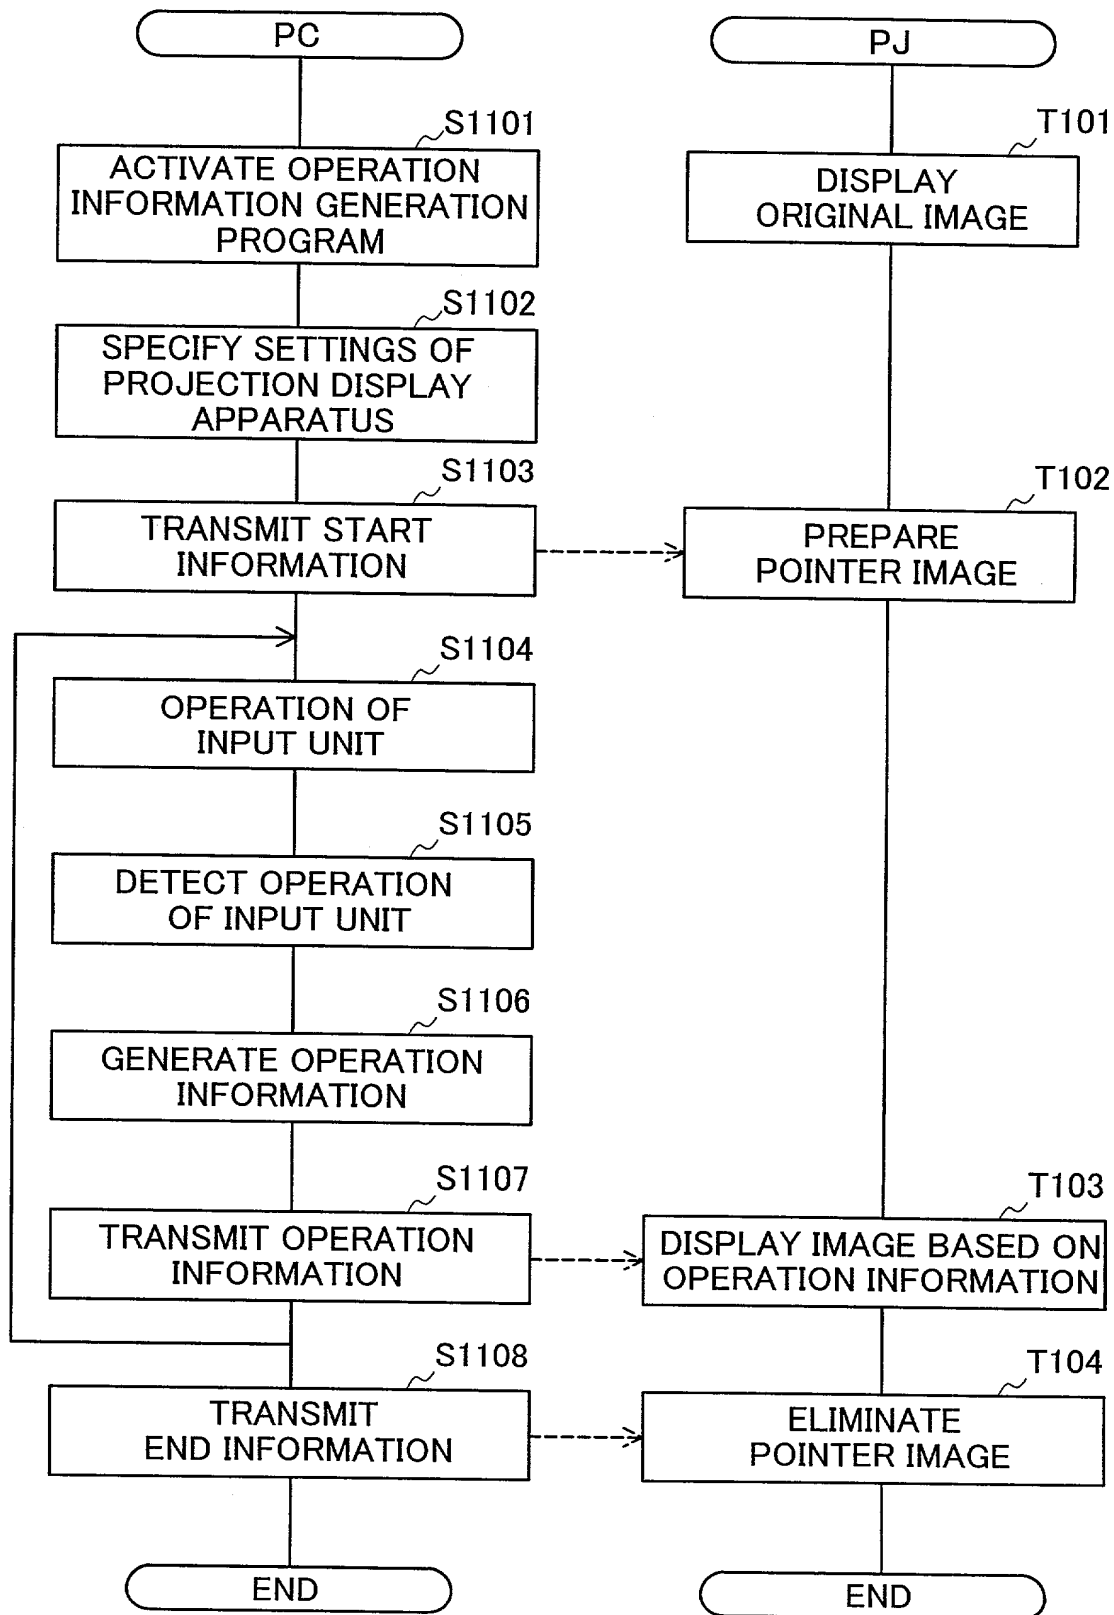 
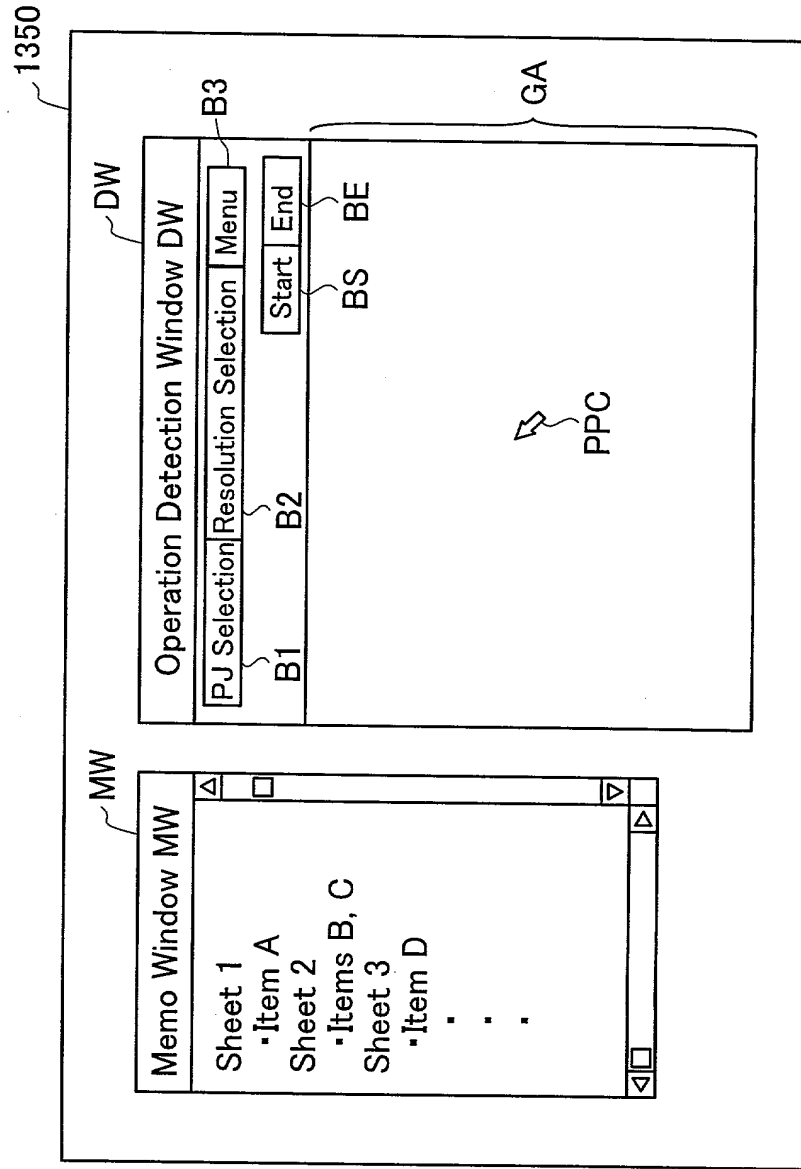 
**Fig.24**

Fig.25



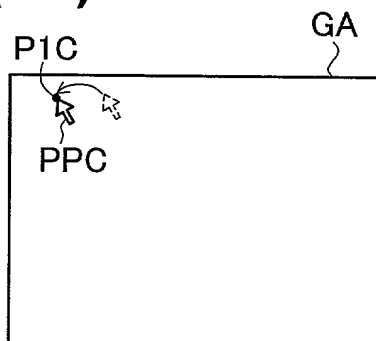 
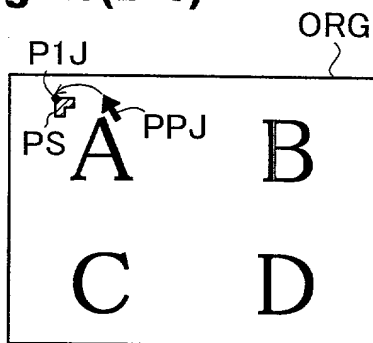 
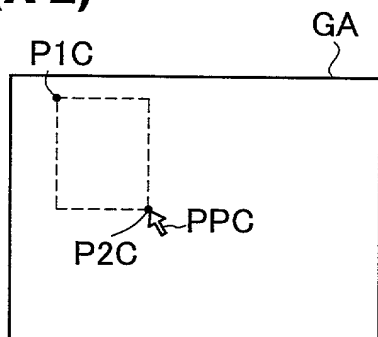 
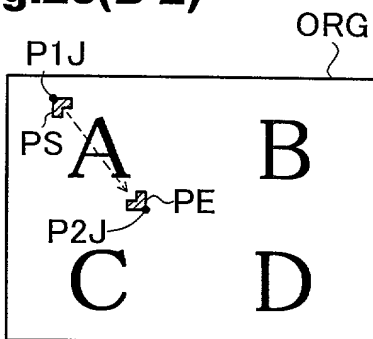 
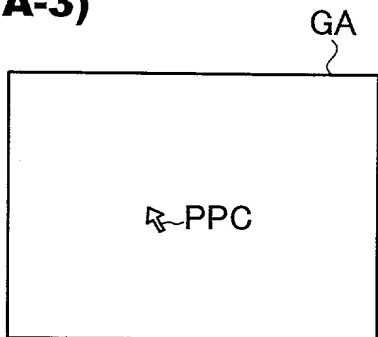 
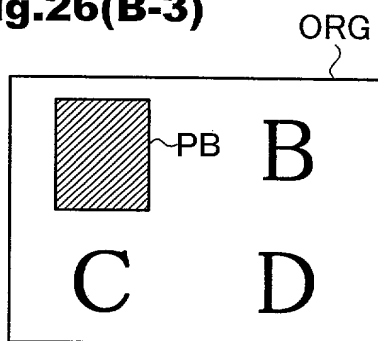 
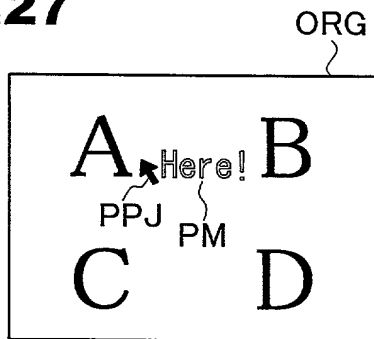 
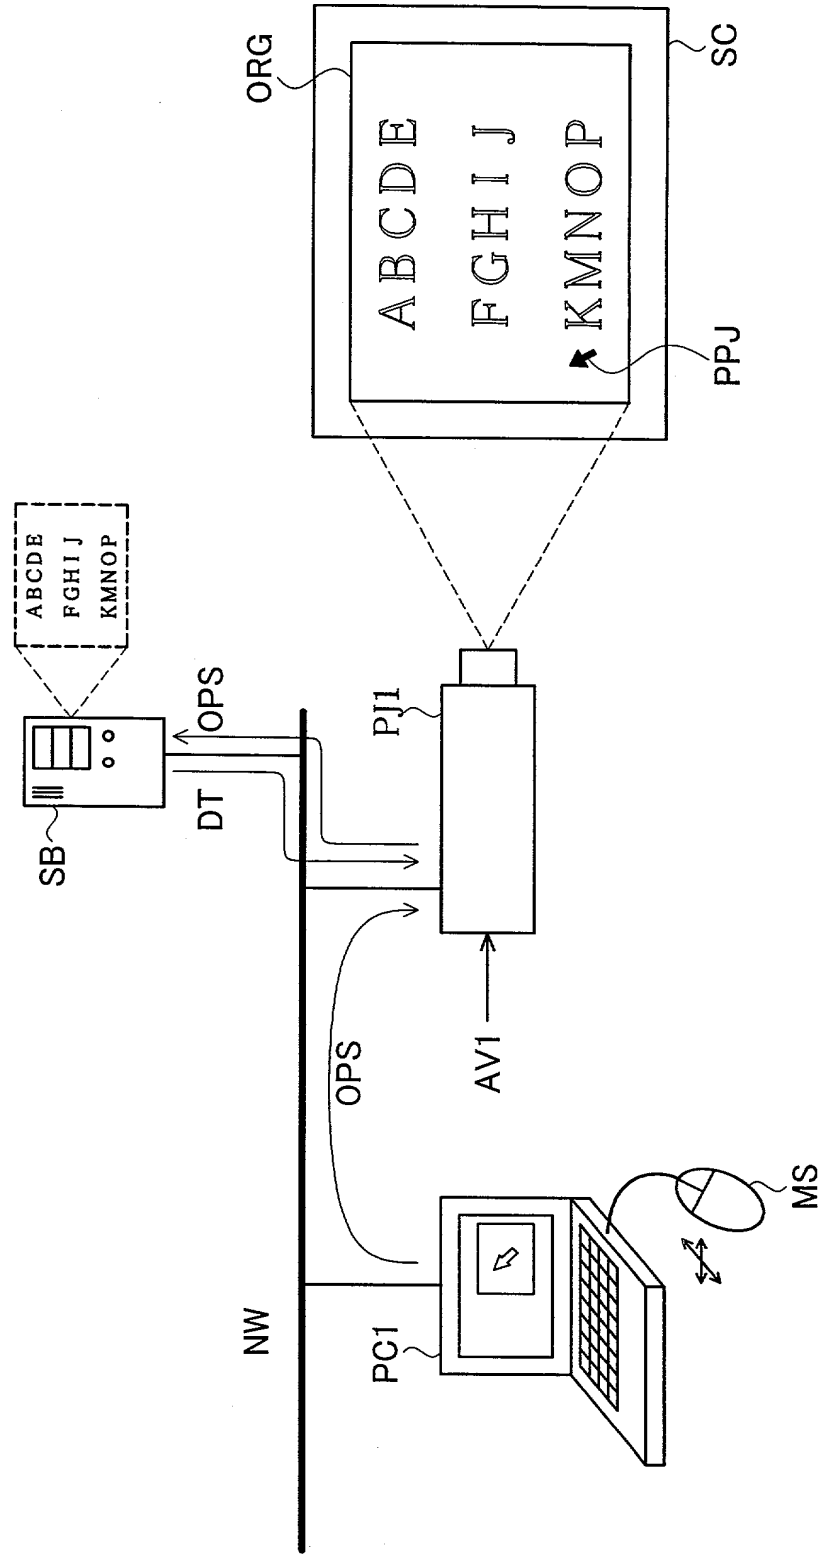 
**Fig.26(A-1)****Fig.26(B-1)****Fig.26(A-2)****Fig.26(B-2)****Fig.26(A-3)****Fig.26(B-3)****Fig.27**

Fig.28





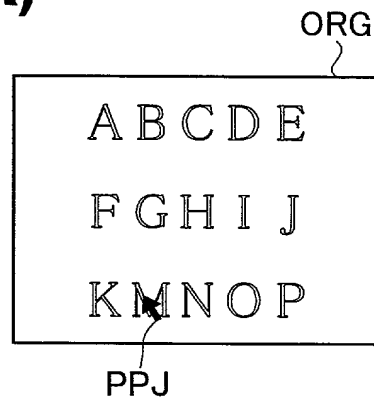 
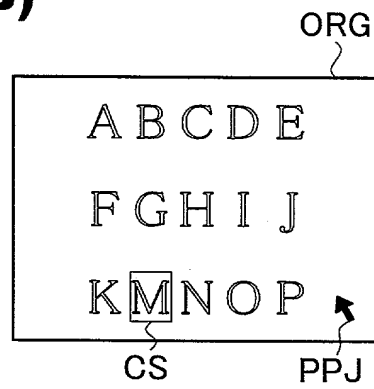 
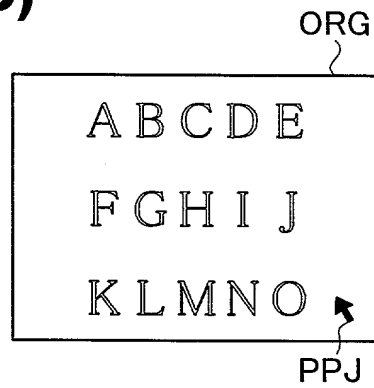 
**Fig.29(A)****Fig.29(B)****Fig.29(C)**

Fig.30

